



SFE PROD 2x10+

SUPERCritical FLUID EXTRACTION SYSTEM FOR PRODUCTION SCALE

STANDARD RANGE

SFE PROD 2x10+

+ We always talk about **effective loading capacity**, not about the volume of the extractor

- 2x20+
- 2x25+
- 2x50+
- 2x100+
- 2x5+

Extraction

Loading capacity	2 x 10L net
Extractor volume	2 x 12,6L
CO ₂ flowrate	50 kg/h
Max pressure	400 bar
Max temperature	100°C

Separation

Capacity	2 x 1L heated 1 x 1L cold trap
Max pressure	200 bar
Max temperature	100°C

➔ Independent pressure and temperature control allows extract fractionation



Co-solvent pump

- > Boost and increase your CO₂ extraction by injecting a 2nd solvent into the CO₂ stream while the extraction is running
- > Allows an easy cleaning of the machine
- > Included in the standard equipment

Innovative CO₂ piston pump

- > Flowrate is automatically controlled with a frequency drive and an integrated flow controller
- > Use of a coriolis flowmeter



Plug & Play

Easy to install, start up and use
User friendly system



100% automated process

Fully automated extract collection, valves, vessel switching, data recording...
Preset recipes
Operator free: all you need to do is press the start button !



PLC control

User friendly control panel, multiple connections for remote control
No computer obsolescence



Continuous production

No time loss: possibility to load another basket while extraction is going on



Compact

Minimum footprint
Easy access to all components



Modular, Mix & Match system

Expandable capacities (possibility to add extractors) and flexible skids
Xtramile optimisation (contact us for customised process optimisation)





Service & support

Reliable service and expert support
Installation, commissioning, training, maintenance, scale up



Premium equipment

High standards
Safe technology, secured parameters and data recording

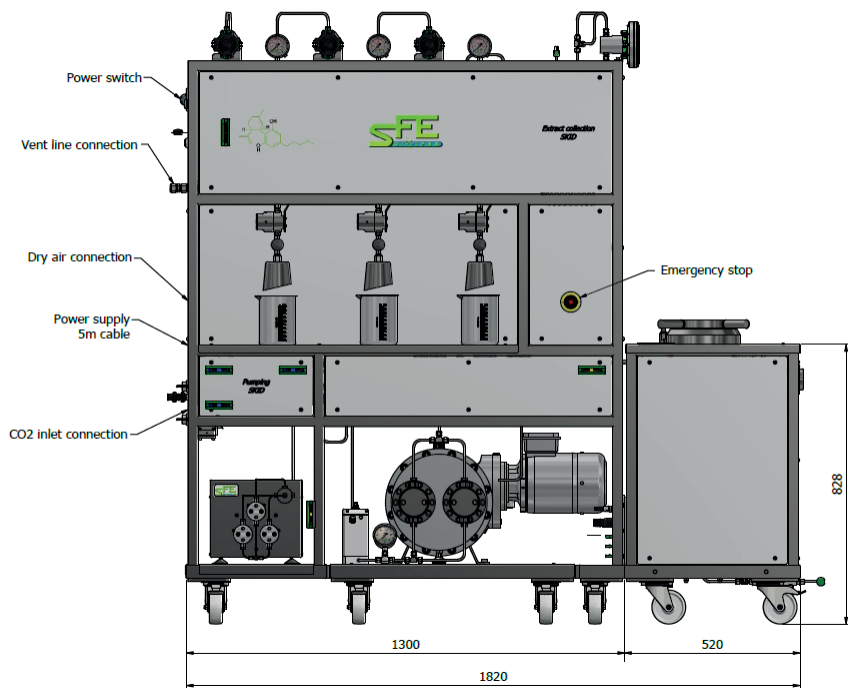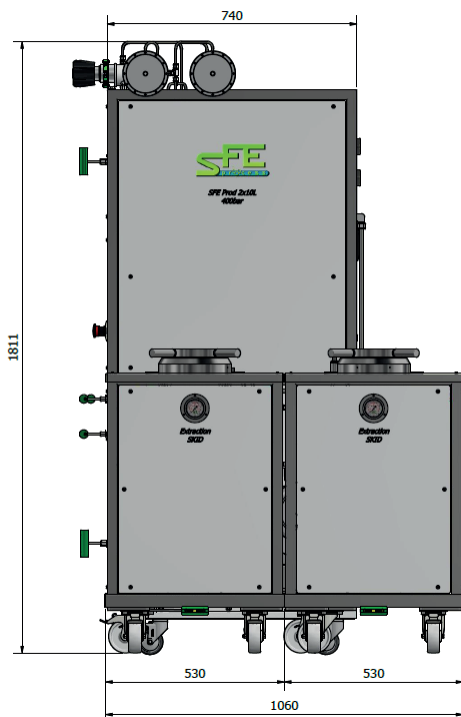

Technical data / installation requirements

- Process fluid** Liquid CO₂ deep pipe cylinder stored at room temperature
1/4" OD pipe
- Power** Equipment: 3-phase / 400V / 50Hz / 32A
Chiller: 3-phase / 400V / 16A circuit-breaker / 46A starting current / 63A electrical protection recommended
- Vent line** 1/2" OD pipe
- Cooling source** A water chiller, supplied by SFE Process must also be connected to the skid with two 3/4" tubes.
The chiller can be placed next to the system, outside or in a adjacent ventilated room.
- Air pressure** @7,5 bar - oil free (not supplied)
- Dimensions** Equipment: **L** 1 820 x **W** 1 060 x **H** 1 811 mm | Chiller: **L** 580 x **W** 650 x **H** 920 mm
- Weight** Equipment: 1 100 kg | Chiller: 125 kg



State-of-the-art design and technology

All our systems are CE marked for Europe according to the PED/2014/68/UE norm. Our systems can be adapted to international standards: ASME, CRN...



4 versions available: • Standard • GMP ready • full GMP • 21 CFR PART 11

Examples of performance achieved by our customers using a SFE Prod 2x10+

With our SFE Prod 2x10+	Cannabis extraction Bulk density: 0,3	Vanilla extraction Bulk density: 0,05
Feedstock processed per extraction/year	8 Tonnes	2 400 kg
Duration of operation (24h/day)	300 days	300 days
Concentration of your plant	15%	25 to 26%
Quantity of oil / year	up to 1200 kg	up to 600 kg

These are theoretical figures that will vary according to the quality of your raw material.



of your valuable compounds is extracted

Assia KONE | International Sales Manager
akone@sfe-process.com | +33 7 49 13 40 66

Piotr KĘSICKI | International Sales Manager
pkesicki@sfe-process.com | +33 6 62 79 63 76

Please contact our experts
for a custom-made
solution !



Leading designer of innovative
supercritical CO₂ solutions